



1. Attach the nRAYAIM onto nRAY body as it is shown in the picture.

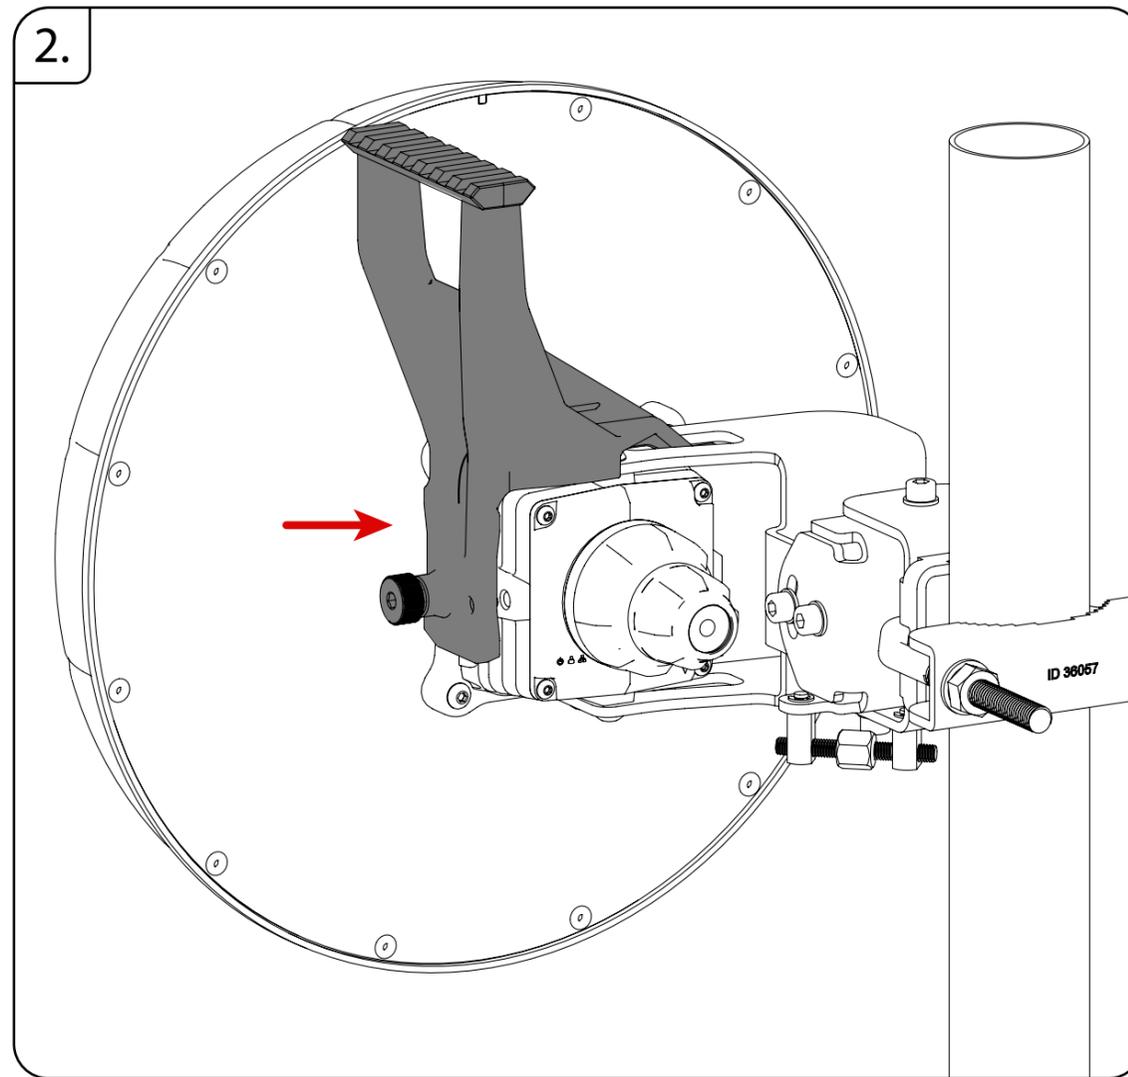

2. Slide nRAYAIM on the nRAY body as it is shown in the picture until it stops in position.

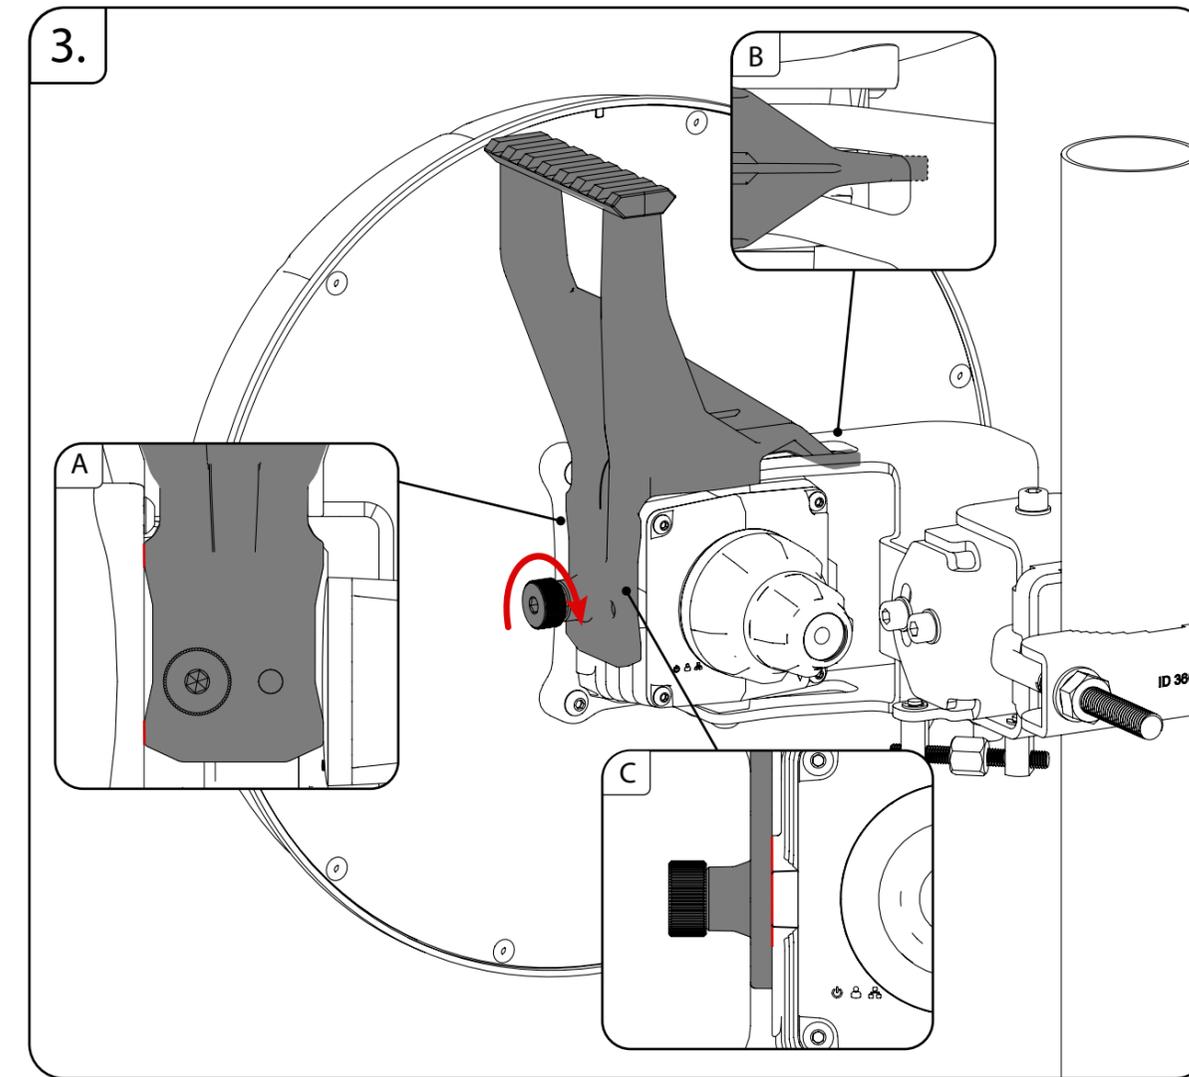

3. Secure the mount with the included screw. Make sure that the nRAYAIM is positioned correctly: A) two edges lean against the product body; B) The nRAYAIM tail is attached under the pole mount; C) The nRAYAIM surface is in level with the shown surface.